


Dimension Information

-Prime Series- (door units with wood jambs)

ROUGH OPENING AND MASONRY OPENING DIMENSIONS WITH SIDELITES

WIDTHS	DOOR ONLY	ONE 12"	TWO 12"	ONE 14"	TWO 14"	
		R.O.	2-8 1/4"	2-9 1/4"	4-1 1/4"	3-11 1/4"
2'-6" SINGLE	M.O.	2-10 1/4"	2-11 1/4"	5-1 1/4"	4-1 1/4"	5-5 1/4"
	R.O.	2-10 1/4"	2-11 1/4"	5-1 1/4"	4-1 1/4"	5-5 1/4"
2'-8" SINGLE	M.O.	3-0 1/4"	3-1 1/4"	5-3 1/4"	4-3 1/4"	5-7 1/4"
	R.O.	3-0 1/4"	3-1 1/4"	5-3 1/4"	4-3 1/4"	5-7 1/4"
2'-10" SINGLE	M.O.	3-2 1/4"	3-3 1/4"	5-5 1/4"	4-5 1/4"	5-9 1/4"
	R.O.	3-2 1/4"	3-3 1/4"	5-5 1/4"	4-5 1/4"	5-9 1/4"
3'-0" SINGLE	M.O.	3-4 1/4"	3-5 1/4"	5-7 1/4"	4-7 1/4"	5-11 1/4"
	R.O.	3-4 1/4"	3-5 1/4"	5-7 1/4"	4-7 1/4"	5-11 1/4"
3'-6" SINGLE	M.O.	3-8 1/4"	3-9 1/4"	5-11 1/4"	4-11 1/4"	6-3 1/4"
	R.O.	3-8 1/4"	3-9 1/4"	5-11 1/4"	4-11 1/4"	6-3 1/4"
5'-0" DOUBLE	M.O.	5-4 1/4"	5-5 1/4"	7-5 1/4"	6-5 1/4"	7-9 1/4"
	R.O.	5-4 1/4"	5-5 1/4"	7-5 1/4"	6-5 1/4"	7-9 1/4"
5'-4" DOUBLE	M.O.	5-8 1/4"	5-9 1/4"	7-9 1/4"	6-9 1/4"	8-1 1/4"
	R.O.	5-8 1/4"	5-9 1/4"	7-9 1/4"	6-9 1/4"	8-1 1/4"
6'-0" DOUBLE	M.O.	6-2 1/4"	6-3 1/4"	8-3 1/4"	7-3 1/4"	8-7 1/4"
	R.O.	6-2 1/4"	6-3 1/4"	8-3 1/4"	7-3 1/4"	8-7 1/4"
SEPARATE WIDTH SIDELITE ONLY	R.O.	1" - 2"	1" - 4"	1" - 4"	1" - 6"	
	M.O.		1" - 4"		1" - 6"	
HEIGHT OF 6" - 8" ABOVE FINISH FLOOR LINE	R.O.	8" - 10"				
	M.O.	6" - 11 1/4"				
HEIGHT OF 7" - 0" ABOVE FINISH FLOOR LINE	R.O.	7" - 2"				
	M.O.	7" - 3 1/4"				

R.O. - INDICATES ROUGH OPENING
M.O. - INDICATES MASONRY OPENING

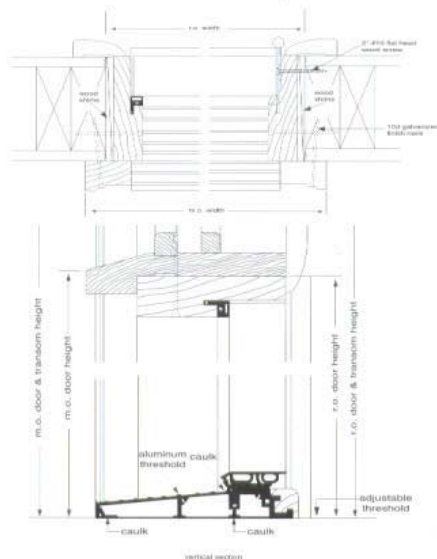


-Replacement Series-

HOW TO MEASURE FOR A REPLACEMENT DOOR
NOTE: DO NOT MEASURE THE OLD DOOR PANEL!
Measure the frame inside to inside.

1. MEASURE THE WIDTH - measure at "A" (hinge to strike). at three places, and use the narrowest measurement.
2. MEASURE THE HEIGHT - If your old door has a removable aluminum or wood threshold, measure from bottom of header to finished floor as shown ("B").

If your old door has a non-removable (one-piece) threshold, measure from bottom of header to top of threshold as shown ("C"). The new threshold is 1-1/8" high - you may want to remove the old wood riser and adjust your measurement accordingly.

3. DETERMINE DOOR NEEDED FROM SIZE TABLE.

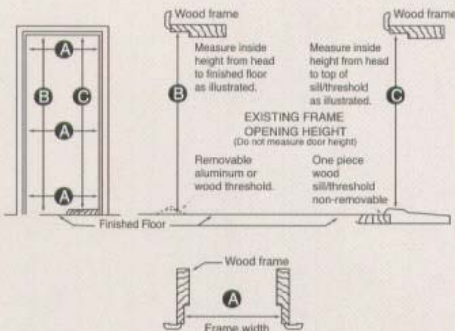

DETERMINE DOOR OPENING SIZES FROM THIS TABLE

Nominal Replacement Door Size	EXISTING OPENING SIZES ACCOMMODATED			
	Opening Width		Opening Height	
	Minimum	Maximum	Minimum	Maximum
2'-6" x 6'-8"	29 1/4"	30 1/2"	80"	80 1/2"
2'-8" x 6'-8"	31 1/4"	32 1/2"	80"	80 1/2"
2'-10" x 6'-8"	33 1/4"	34 1/2"	80"	80 1/2"
3'-0" x 6'-8"	35 1/4"	36 1/2"	80"	80 1/2"
3'-6" x 6'-8"	41 1/4"	42 1/2"	80"	80 1/2"
2'-6" x 7'-0"	29 1/4"	30 1/2"	84"	84 1/2"
2'-8" x 7'-0"	31 1/4"	32 1/2"	84"	84 1/2"
2'-10" x 7'-0"	33 1/4"	34 1/2"	84"	84 1/2"
3'-0" x 7'-0"	35 1/4"	36 1/2"	84"	84 1/2"
3'-6" x 7'-0"	41 1/4"	42 1/2"	84"	84 1/2"
5'-0" x 6'-8"	59 1/4"	60"	80"	80 1/2"
5'-4" x 6'-8"	63 1/4"	64"	80"	80 1/2"
5'-8" x 6'-8"	67 1/4"	68"	80"	80 1/2"
6'-0" x 6'-8"	71 1/4"	72"	80"	80 1/2"